

Application Programming Interface V1.03



# **Table of Contents**

1.0.	Introduction4					
2.0.	Features	5				
3.0.	Architecture	6				
3.1.	Reader Block Diagram	6				
3.2.	Communication among the PC/SC Driver, PICC and SAM					
4.0.	Hardware Design					
4.1. 4.1.	USB					
4.1. 4.1.						
4.2.	Contact Smart Card Interface					
4.2.						
4.2.	2. Card Type Selection	8				
4.2.						
4.3.	Contactless Smart Card Interface					
4.3.						
4.3.	<b>5</b>					
4.4. 4.4.	User Interface					
4.4. 4.4.						
5.0.	Contactless Smart Card Protocol	10				
5.1.	ATR Generation	10				
_	1. ATR format for ISO 14443 Part 3 PICCs					
5.1.						
5.2.	Pseudo APDUs for Contactless Interface					
5.2.						
5.2. 5.2.						
5.∠. 5.2.	· · · · · · · · · · · · · · · · · · ·					
-						
6.0.	Peripherals Control	24				
6.1.	Get Firmware Version	24				
6.2.	Buzzer Control					
6.3.	Get Serial Number of the reader					
6.4.	Read the PICC Operating Parameter					
6.5.	Set PICC Operating Parameter					
6.6. 6.7.	2 LEDs Control					
6.8.	Set Default LED and Buzzer Behaviors					
6.9.	Read Default LED and Buzzer Behaviors					
6.10.	Store 1 <sup>st</sup> Data Storage Area					
6.11.	Store 2 <sup>nd</sup> Data Storage Area	34				
6.12.	Read 1 <sup>st</sup> Data Storage Area	35				
6.13.	Read 2 <sup>nd</sup> Data Storage Area					
6.14.	LCD Control Command					
6.14						
6.14						
6.14 6.14						
6.14						
6.14	1 7					
6.14	<u> </u>					
6.14	· · · · · · · · · · · · · · · · · · ·					
6 1	1.0 LCD Packlight Control	17				



Appendix A.	Basic Program Flow for Contactless Applications48				
Appendix B.	Access PCSC Compliant Tags (ISO 14443-4)	49			
Appendix C.	Access MIFARE DESFire Tags (ISO 14443-4)				
Appendix D.	Access FeliCa Tags (ISO 18092)	53			
Appendix E.	NFC Forum Type 1 Tags (ISO 18092)	54			
Appendix F.	Basic Program Flow for SAM Applications	56			
Appendix G.	Access ACOS3 SAM Cards (ISO 7816)	57			
Appendix H.	ACR122U Compatible Commands	58			
Appendix H.1. Appendix H.2. Appendix H.3. Appendix H.4.	Direct Transmit via PC_to_RDR_XfrBlock/PC_to_RDR_Escape Get Firmware Version	58 58 59			
List of Fig	gures				
Figure 1 : Read	der Block Diagram	6			
Figure 2 : ACR	1222L Architecture	7			
List of Ta	ibles				
Table 1 : USB I	nterface Wiring	8			
	er Event				
	RE 1K Memory Map				
	RE 4K Memory Map				
Table 5 : MIFAI	RE Ultralight Memory Map	17			



# 1.0. Introduction

The ACR1222L NFC Reader with LCD is a PC-linked device that is used for accessing contactless cards. Its contactless interface is used to access ISO 14443-4 Types A and B cards, MIFARE®, FeliCa and ISO 18092 or NFC tags. ACR1222L also has three Secure Access Module (SAM) slots which can be used with ISO 7816 compliant Class A SAM cards to add a layer of security for contactless smart card applications.

ACR1222L serves as an intermediary device between the computer and the smart card. The reader is connected to the computer via USB port and carries out the commands whether to communicate with a contactless tag or SAM card, or control the device peripherals (LCD, LED or buzzer). This API document provides a detailed guide on implementing PC/SC APDU commands for device peripherals and contactless tags following the PC/SC Specifications.



# 2.0. Features

- USB 2.0 Full Speed Interface
- CCID Compliance
- Smart Card Reader:
  - Contactless Interface:
    - Read/Write speed of up to 424 Kbps
    - Built-in antenna for contactless tag access, with card reading distance of up to 50 mm (depending on tag type)
    - Support for ISO 14443 Part 4 Type A and B cards, MIFARE, FeliCa and all four types of NFC (ISO/IEC 18092) tags
    - Built-in anti-collision feature (only one tag is accessed at any time)
  - o SAM Interface:
    - Three SAM slots
    - Supports ISO 7816-acompliant Class A SAM cards
- · Application Programming Interface:
  - o Supports PC/SC
  - Supports CT-API (through wrapper on top of PC/SC)
- Built-in Peripherals:
  - Two-line graphic LCD with interactive operability (i.e. scroll up and down, left and right, etc.) and multi-language support (i.e. Chinese, English, Japanese and several European languages)
  - o Four user-controllable LEDs
  - User-controllable buzzer
- USB Firmware Upgradability
- Supports Android<sup>™</sup> 3.1 and above
- Compliant with the following standards:
  - o ISO 14443
  - o ISO 7816 Class A (SAM slot)
  - o CE
  - o FCC
  - o KC
  - VCCI
  - o PC/SC
  - o CCID
  - Microsoft® WHQL
  - o RoHS 2
  - o REACH



# 3.0. Architecture

# 3.1. Reader Block Diagram

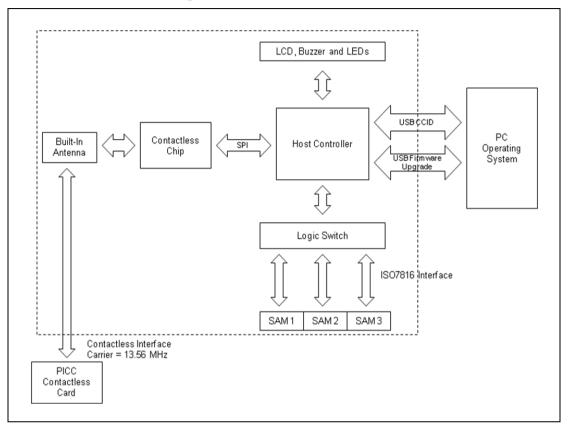


Figure 1: Reader Block Diagram



# 3.2. Communication among the PC/SC Driver, PICC and SAM

The communication between the ACR1222L and the PC is using CCID protocol. All communication between PICC and SAM are PC/SC compliant.

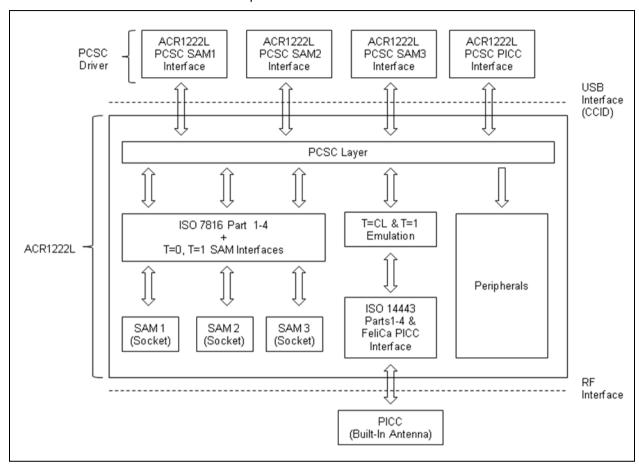


Figure 2: ACR1222L Architecture



# 4.0. Hardware Design

## 4.1. USB

The ACR1222L connects to a computer through a USB following the USB standard.

#### 4.1.1. Communication Parameters

The ACR1222L connects to a computer through USB as specified in the USB Specification 2.0. The ACR1222L is working in full speed mode, i.e. 12 Mbps.

Pin	Signal	Function		
1	$V_{\text{BUS}}$	+5V power supply for the reader		
2	D-	Differential signal transmits data between ACR1222L and PC.		
3	D+	Differential signal transmits data between ACR1222L and PC.		
4	GND	Reference voltage level for power supply		

Table 1: USB Interface Wiring

**Note:** In order for the ACR1222L to function properly through USB interface, the device driver should be installed.

# 4.1.2. Endpoints

The ACR1222L uses the following endpoints to communicate with the host computer:

Control Endpoint For setup and control purpose

Bulk OUT For command to send from host to ACR1222L (data packet size is 64 bytes)

Bulk IN For response to send from ACR1222L to host (data packet size is 64 bytes)

Interrupt IN For card status message to sent from ACR1222L to host (data packet size is

8 bytes)

# 4.2. Contact Smart Card Interface

The interface between the ACR1222L and the inserted smart card follows the ISO 7816-3 specifications with certain restrictions or enhancements to increase the practical functionality of the ACR1222L.

### 4.2.1. Smart Card Power Supply VCC (C1)

The current consumption of the inserted card must not be any higher than 50 mA.

# 4.2.2. Card Type Selection

Before activating the inserted card, the controlling PC always needs to select the card type through the proper command sent to the ACR1222L. This includes both memory card and MCU-based cards.

For MCU-based cards the reader allows to select the preferred protocol, T=0 or T=1. However, this selection is only accepted and carried out by the reader through the PPS when the card inserted in the reader supports both protocol types. Whenever a MCU-based card supports only one protocol type, T=0 or T=1, the reader automatically uses that protocol type, regardless of the protocol type selected by the application.



## 4.2.3. Interface for Microcontroller-based Cards

For microcontroller-based smart cards only the contacts C1 (VCC), C2 (RST), C3 (CLK), C5 (GND) and C7 (I/O) are used. A frequency of 4 MHz is applied to the CLK signal (C3).

## 4.3. Contactless Smart Card Interface

The interface between the ACR1222L and the Contactless follows the ISO 14443 specifications with certain restrictions or enhancements to increase the practical functionality of the ACR1222L.

# 4.3.1. Carrier Frequency

The carrier frequency for ACR1222L is 13.56 MHz.

# 4.3.2. Card Polling

The ACR1222L automatically polls the contactless cards that are within the field. ISO 14443-4 Type A, ISO 14443-4 Type B and MIFARE, FeliCa and NFC tags are supported.

# 4.4. User Interface

#### 4.4.1. Buzzer

A monotone buzzer is used to show the "Card Present" and "Card Removal" events.

User-controllable Monotone Buzzer.

Events	Buzzer
1. The reader powered up and initialization success.	Beep
2. Card Present Event (PICC)	Beep
3. Card Removal Event (PICC)	Веер

Table 2: Buzzer Event

## 4.4.2. LED

- 4 x user-controllable single-color LEDs
- LED colors are: Green, Blue, Orange and Red (from left to right)



# 5.0. Contactless Smart Card Protocol

# 5.1. ATR Generation

If the reader detects a PICC, an ATR will be sent to the PC/SC driver for identifying the PICC.

# 5.1.1. ATR format for ISO 14443 Part 3 PICCs

Byte	Value (Hex)	Designation	Description
0	3Bh	Initial Header	-
1	8Nh	ТО	Higher nibble 8 means: no TA1, TB1, TC1 only TD1 is following.  Lower nibble N is the number of historical bytes (HistByte 0 to HistByte N-1)
2	80h	TD1	Higher nibble 8 means: no TA2, TB2, TC2 only TD2 is following.  Lower nibble 0 means T = 0
3	01h	TD2	Higher nibble 0 means no TA3, TB3, TC3, TD3 following.  Lower nibble 1 means T = 1
	80h	T1	Category indicator byte, 80 means A status indicator may be present in an optional COMPACT-TLV data object
	4Fh		Application identifier Presence Indicator
	0Ch		Length
4 to 3+N	RID	Tk	Registered Application Provider Identifier (RID) # A0 00 00 03 06h
	SS		Byte for standard
	C0h C1h		Bytes for card name
	00 00 00 00h	RFU	RFU # 00 00 00 00h
4+N	UUh	TCK	Exclusive-oring of all the bytes T0 to Tk

# Example:

ATR for MIFARE 1K =  $\{38\ 8F\ 80\ 01\ 80\ 4F\ 0C\ A0\ 00\ 00\ 03\ 06\ 03\ 00\ 01\ 00\ 00\ 00\ 00\ 00\ 6Ah\}$  Where:

**Length (YY)** = 0Ch

**RID** = A0 00 00 03 06h (PC/SC Workgroup)

**Standard (SS)** = 03h (ISO 14443A, Part 3)

Card Name (C0 ... C1) =  $\frac{00 \text{ 01}}{\text{h}}$  (MIFARE 1K)

00 02h: MIFARE 4K

00 03h: MIFARE Ultralight

00 26h: MIFARE Mini

F0 04h: Topaz and Jewel



F0 11h: FeliCa 212K F0 12h FeliCa 424K FF 28h: JCOP 30

FFh [SAK]: undefined tags

## 5.1.2. ATR format for ISO 14443 Part 4 PICCs

Byte	Value (Hex)	Designation	Description
0	3Bh	Initial Header	-
1	8Nh	ТО	Higher nibble 8 means: no TA1, TB1, TC1 only TD1 is following.  Lower nibble N is the number of historical bytes (HistByte 0 to HistByte N-1)
2	80h	TD1	Higher nibble 8 means: no TA2, TB2, TC2 only TD2 is following.  Lower nibble 0 means T = 0
3	01h	TD2	Higher nibble 0 means no TA3, TB3, TC3, TD3 following.  Lower nibble 1 means T = 1
	XXh	T1	Historical Bytes:
4 to 3 + N	XXh XXh XXh	Tk	ISO 14443A: The historical bytes from ATS response. Refer to the ISO 14443-4 specifications.  ISO 14443B: The higher layer response from the ATTRIB response (ATQB). Refer to the ISO 14443-3 specifications.
4+N	UUh	TCK	Exclusive-oring of all the bytes T0 to Tk

# **Example 1**: Consider the ATR from DESFire as follows:

DESFire (ATR) = 3B 81 80 01 80 80h (6 bytes of ATR)

**Note:** Use the APDU "FF CA 01 00 00h" to distinguish the ISO 14443A-4 and ISO 14443B-4 PICCs and retrieve the full ATS if available. The ATS is returned for ISO 14443A-3 or ISO 14443B-3/4 PICCs.

APDU Command = FF CA 01 00 00h

APDU Response = 06 75 77 81 02 90 00h

ATS = 06 75 77 81 02 80h

### Example 2:

ATR for ST19XRC8E = 3B 88 80 01 12 53 54 4E 33 81 C3 00 23h

Application Data of ATQB = 12 53 54 4Eh

Protocol Info of ATQB = 33 81 C3h



# 5.2. Pseudo APDUs for Contactless Interface

The following Pseudo APDUs are used for exchanging data with non-PC/SC compliant tags. Pseudo APDUs can be sent through the PICC Interface is the tag is already connected or sent using Escape Command if the tag is not yet presented.

# 5.2.1. Direct Transmit via PC\_to\_RDR\_Escape

#### Command

Command	Class	INS	P1	P2	Lc	Data In
Direct Transmit	E0h	00h	00h	24h	Number of Bytes to send	Contactless Chip and Tag Command

Where:

Lc 1 Byte. Number of Bytes to Send

- Maximum of 255 bytes

Data In Contactless Chip and Tag Command

The data to be sent to the Contactless Chip and Tag

### Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	Number of Bytes to be Received	Contactless Chip and Tag Response

Where:

Data Out Contactless Chip and Tag Response

Contactless Chip and Tag Response returned by the reader



# 5.2.2. Get Data

This command is used to return the serial number or ATS of the "connected PICC".

### Command

Command	Class	INS	P1	P2	Le
Get Data	FFh	CAh	00h 01h	00h	00h (Max Length)

# Response if P1 = 00h

Response	Data Out					
Result	UID (LSB)			UID (MSB)	SW1	SW2

# Response if P1 = 01h

Response	Data Out		
Result	ATS	SW1	SW2

# Response Codes

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is successfully completed.
Warning	62h	82h	End of UID/ATS reached before Le bytes (Le is greater than UID Length).
Error	6Ch	XXh	Wrong length (wrong number Le: 'XX' encodes the exact number) if Le is less than the available UID length.
Error	63h	00h	The operation failed.
Error	6Ah	81h	Function is not supported.

Example 1: To get the serial number of the connected PICC

UINT8 GET\_UID[5] = {FF CA 00 00 00h};

Example 2: To get the ATS of the connected ISO 14443 A PICC

UINT8 GET\_ATS[5] = {FF CA 01 00 00h};



# 5.2.3. PICC Commands (T=CL Emulation) for MIFARE 1K/4K Memory Cards

# 5.2.3.1. Load Authentication Keys

This command is used to load the authentication keys into the reader. The authentication keys are used to authenticate the specified sector of the MIFARE 1K/4K Memory Card. Volatile authentication key location is provided.

#### Command

Command	Class	INS	P1	P2	Lc	Data In
Load Authentication Keys	FFh	82h	Key Structure	Key Number	06h	Key (6 bytes)

Where:

Key Structure 1 Byte

00h = Key is loaded into the reader volatile memory

Other = Reserved

Key Number 1 Byte

00h - 01h = Key Location

The keys will be erased when the reader is disconnected from the PC

**Key** 6 Bytes

The key value loaded into the reader

e.g. {FF FF FF FF FFh}

#### Response

Response	Data Out		
Result	SW1	SW2	

Where:

SW1, SW2 = 90 00h means the operation is completed successfully

= 63 00h means the operation failed

## **Example:**

Load a key {FF FF FF FF FF FFh} into the key location 00h.

APDU = {FF 82 00 00 06 FF FF FF FF FF FFh}



### 5.2.3.2. Authentication for MIFARE 1K/4K

This command is used to authenticate the MIFARE 1K/4K card (PICC) using the keys stored in the reader. Two types of authentication keys are used Type\_A and Type\_B.

#### Command

Command	Class	INS	P1	P2	Р3	Data In
Authentication 6 Bytes (Obsolete)	FFh	88h	00h	Block Number	Key Type	Key Number

#### Command

Command	Class	INS	P1	P2	Lc	Data In
Authentication 10 Bytes	FFh	86h	00h	00h	05h	Authenticate Data Bytes

#### Where:

#### Authenticate Data Bytes 5 Bytes

Byte1	Byte 2	Byte 3	Byte 4	Byte 5
Version	00h	Block	Key	Key
01h	UUII	Number	Type	Number

Block Number 1 Byte

The memory block to be authenticated

**Note:** For MIFARE 1K Card, it has a total of 16 sectors and each sector consists of 4 consecutive blocks. For example, Sector 00h consists of Blocks {00h, 01h, 02h and 03h}; Sector 01h consists of Blocks {04h, 05h, 06h and 07h}; the last sector 0F consists of Blocks {3Ch, 3Dh, 3Eh and 3Fh}.

Once the authentication is done successfully, there is no need to do the authentication again provided that the blocks to be accessed belong to the same sector. Please refer to the MIFARE 1K/4K specification for more details.

Key Type 1 Byte

60h = Key is used as a TYPE A key for authentication

61h = Key is used as a TYPE B key for authentication

Key Number 1 Byte

00h ~ 01h = Key Location

# Response Format

Response	Data Out			
Result	SW1	SW2		

Where:

SW1, SW2 = 90 00h means the operation is completed successfully

= 63 00h means the operation failed



Sectors (Total 16 sectors. Each sector consists of 4 consecutive blocks)	Data Blocks (3 blocks, 16 bytes per block)	Trailer Block (1 block, 16 bytes)	
Sector 0	00h ~ 02h	03h	
Sector 1	04h ~ 06h	07h	
			) 1 KB
			INB
Sector 14	38h ~ 0Ah	3Bh	
Sector 15	3Ch ~ 3Eh	3Fh	

Table 3: MIFARE 1K Memory Map

Sectors (Total 32 sectors. Each sector consists of 4 consecutive blocks)	Data Blocks (3 blocks, 16 bytes per block)	Trailer Block (1 block, 16 bytes)
Sector 0	00h ~ 02h	03h
Sector 1	04h ~ 06h	07h
Sector 30	78h ~ 7Ah	7Bh
Sector 31	7Ch ~ 7Eh	7Fh

Table 4: MIFARE 4K Memory Map

Sectors (Total 8 sectors. Each sector consists of 16 consecutive blocks)	Data Blocks (15 blocks, 16 bytes per block)	Trailer Block (1 block, 16 bytes)	
Sector 32	80h ~ 8Eh	8Fh	
Sector 33	90h ~ 9Eh	9Fh	
:			2 KF
:			
Sector 38	E0h ~ EEh	EFh	
Sector 39	F0h ~ FEh	FFh	J

**Example1**: To authenticate Block 04h with the following characteristics: Type A, key number 00h, from PC/SC V2.01 (Obsolete).

APDU = { FF 88 00 04 60 00h }



**Example2**: Similar to the previous example, to authenticate Block 04h with the following characteristics: Type A, key number 00h, from PC/SC V2.07.

APDU = { FF 86 00 00 05 01 00 04 60 00h }

**Note:** MIFARE Ultralight does not need authentication since it provides free access to the user data area.

Byte Number	0	1	2	3	Page
Serial Number	SN0	SN1	SN2	BCC0	0
Serial Number	SN3	SN4	SN5	SN6	1
Internal / Lock	BCC1	Internal	Lock0	Lock1	2
OTP	OPT0	OPT1	OTP2	OTP3	3
Data read/write	Data0	Data1	Data2	Data3	4
Data read/write	Data4	Data5	Data6	Data7	5
Data read/write	Data8	Data9	Data10	Data11	6
Data read/write	Data12	Data13	Data14	Data15	7
Data read/write	Data16	Data17	Data18	Data19	8
Data read/write	Data20	Data21	Data22	Data23	9
Data read/write	Data24	Data25	Data26	Data27	10
Data read/write	Data28	Data29	Data30	Data31	11
Data read/write	Data32	Data33	Data34	Data35	12
Data read/write	Data36	Data37	Data38	Data39	13
Data read/write	Data40	Data41	Data42	Data43	14
Data read/write	Data44	Data45	Data46	Data47	15

Table 5: MIFARE Ultralight Memory Map

512 bits Or 64 bytes



# 5.2.3.3. Read Binary Blocks

This command is used to retrieve multiple "data blocks" from the PICC. The data block/trailer must be authenticated first before executing the "Read Binary Blocks" command.

#### Command

Command	Class	INS	P1	P2	Le
Read Binary Blocks	FFh	B0h	00h	Block Number	Number of Bytes to Read

Where:

Block Number 1 Byte. Starting Block

Number of Bytes to Read 1 Byte. The length of the bytes to be read can be a multiple

of 16 bytes for MIFARE 1K/4K or a multiple of 4 bytes for

MIFARE Ultralight

Maximum of 16 bytes for MIFARE Ultralight

Maximum of 48 bytes for MIFARE 1K. (Multiple Blocks Mode;

3 consecutive blocks)

Maximum of 240 bytes for MIFARE 4K. (Multiple Blocks

Mode; 15 consecutive blocks)

**Example 1**: 10h (16 bytes). The starting block only (Single Block Mode)

**Example 2**: 40h (64 bytes). From the starting block to starting block + 3 (Multiple Blocks Mode)

**Note:** For security considerations, the Multiple Block Mode is used for accessing Data Blocks only. The Trailer Block is not supposed to be accessed in Multiple Blocks Mode. Please use Single Block Mode to access the Trailer Block.

#### Response

Response	Data Out				
Result	Data (Multiply of 4/16 Bytes)	SW1	SW2		

Where:

SW1, SW2 = 90 00h means the operation is completed successfully

= 63 00h means the operation failed

**Example 1**: Read 16 bytes from the binary block 04h (MIFARE 1K or 4K)

APDU = { FF B0 00 04 10h }

**Example 2**: Read 240 bytes starting from the binary block 80h (MIFARE 4K). Block 80h to Block 8Eh (15 blocks)

APDU = { FF B0 00 80 F0h }



# 5.2.3.4. Update Binary Blocks

This command is used to write multiple data blocks into the PICC. The data block/trailer block must be authenticated first before executing the "Update Binary Blocks" command.

#### Command

Command	Class	INS	P1	P2	Lc	Data In
Update Binary Blocks	FFh	D6h	00h	Block Number	Number of Bytes to Update	Block Data (Multiple of 16 Bytes)

Where:

Block Number 1 Byte. Starting Block

Number of Bytes to Read 1 Byte. The length of the bytes to be read can be a multiple

of 16 bytes for MIFARE 1K/4K or a multiple of 4 bytes for

MIFARE Ultralight

Maximum of 16 bytes for MIFARE Ultralight

Maximum of 48 bytes for MIFARE 1K. (Multiple Blocks Mode;

3 consecutive blocks).

Maximum of 240 bytes for MIFARE 4K. (Multiple Blocks

Mode; 15 consecutive blocks).

**Example 1**: 10h (16 bytes). The starting block only. (Single Block Mode)

**Example 2**: 30h (48 bytes). From the starting block to starting block+2. (Multiple Blocks Mode)

**Note:** For security considerations, the Multiple Block Mode is used for accessing Data Blocks only. The Trailer Block is not supposed to be accessed in Multiple Blocks Mode. Please use Single Block Mode to access the Trailer Block.

**Block Data** Multiple of 16 + 2 Bytes, or 6 Bytes. Data to be written into the binary blocks.

#### Response

Response	Data Out	
Result	SW1	SW2

Where:

SW1, SW2 = 90 00h means the operation is completed successfully

= 63 00h means the operation failed

Example 1: Update the binary block 04h of MIFARE 1K/4K with Data {00 01h .. 0Fh}

APDU = { FF D6 00 04 10 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0Fh }

Example 2: Update the binary block 04h of MIFARE Ultralight with Data { 00 01 02 03h }

APDU = {FF D6 00 04 04 00 01 02 03h }



# 5.2.3.5. Value Block Operation (Increment, Decrement, Store)

This command is used to manipulate value-based transactions (e.g. increment a value block, etc.).

#### Command

Command	Class	INS	P1	P2	Lc		Data In
Value Block Operation	FFh	D7h	00h	Block Number	05h	VB_OP	VB_Value (4 Bytes) {MSB LSB}

#### Where:

Block Number 1 Byte. Value Block to be manipulated

**VB\_OP** 1 Byte. Value block operation

00h = Store VB\_Value into the block. The block will then be converted to a value block.

01h = Increment the value of the value block by the VB\_Value. This command is only valid for value blocks.

02h = Decrement the value of the value block by the VB\_Value. This command is only valid for value blocks.

**VB\_Value** 4 Byte. The value used for manipulation. The value is a signed long integer.

### Example 1: Decimal - 4 = { FF FF FF FCh }

VB_Value				
MSB LSB				
FFh	FFh	FFh	FCh	

# **Example 2**: Decimal 1 = { 00 00 00 01h }

VB_Value				
MSB LSB				
00h	00h	00h	01h	

# Response

Response	Data	Out
Result	SW1	SW2

### Where:

SW1, SW2 = 90 00h means the operation is completed successfully

= 63 00h means the operation failed



### 5.2.3.6. Read Value Block

This command is used to retrieve the value from the value block. This command is only valid for value blocks.

#### Command

Command	Class	INS	P1	P2	Le
Read Value Block	FFh	B1h	00h	Block Number	00h

Where:

Block Number 1 Byte. The value block to be accessed.

### Response

Response	Data Out				
Result	Value {MSB LSB}	SW1	SW2		

# Response

Response	Data Out			
Result	Value {MSB LSB}	SW1	SW2	

Where:

Value

4 Bytes. The value returned from the cards. The value is a signed long integer.

Example 1: Decimal - 4 = { FF FF FF FCh }

VB_Value				
MSB LSB				
FFh	FFh	FFh	FCh	

**Example 2**: Decimal 1 = { 00 00 00 01h }

VB_Value				
MSB LSB				
00h	00h	00h	01h	

# Response

Response	Data	Out
Result	SW1	SW2

Where:

SW1, SW2 = 90 00h means the operation is completed successfully

= 63 00h means the operation failed



# 5.2.3.7. Copy Value Block

This command is used to copy a value from a value block to another value block.

#### Command

Command	Class	INS	P1	P2	Lc		Data In
Value Block Operation	FFh	D7h	00h	Source Block Number	02h	03h	Target Block Number

Where:

Source Block Number 1 Byte. Block number where the value will come from and copied

to the target value block.

Target Block Number Byte. Block number where the value from the source block will be

copied to. The source and target value blocks must be in the

same sector.

# Response

Response	Data Out				
Result	SW1	SW2			

Where:

SW1, SW2 = 90 00h means the operation is completed successfully

= 63 00h means the operation failed

Example 1: Store a value "1h" into block 05h

APDU = {FF D7 00 05 05 00 00 00 00 01 h }

Example 2: Read the value block 05h

 $APDU = \{ FF B1 00 05 00h \}$ 

Example 3: Copy the value from value block 05h to value block 06h

APDU = {FF D7 00 05 02 03 06h }

Example 4: Increment the value block 05h by "5h"

APDU = {FF D7 00 05 05 01 00 00 00 05h}



# 5.2.4. Access PC/SC Compliant Tags (ISO 14443-4)

All ISO 14443-4 compliant cards (PICCs) understand the ISO 7816-4 APDUs. The ACR1222L Reader needs to communicate with the ISO 14443-4 compliant cards through exchanging ISO 7816-4 APDUs and Responses. ACR1222U will handle the ISO 14443 Parts 1-4 Protocols internally.

The MIFARE 1K, 4K, MINI and Ultralight tags are supported through the T=CL emulation. Just simply treat the MIFARE tags as standard ISO 14443-4 tags. For more information, please refer to **Section 5.2.3**.

#### Command

Command	Class	INS	P1	P2	Lc	Data In	Le
ISO 7816 Part 4 Command					Length of the Data In		Expected length of the Response Data

#### Response

Response	Data Out					
Result	Response Data	SW1	SW2			

#### Where:

**SW1, SW2** = 90 00h means the operation is completed successfully = 63 00h means the operation failed

Typical sequence may be:

- Present the Tag and Connect the PICC Interface
- Read/ Update the memory of the tag

#### Step 1: Connect the Tag.

The ATR of the tag is 3B 88 80 01 00 00 00 00 33 81 81 00 3A In which,

The Application Data of ATQB =  $00\ 00\ 00\ 00$ , protocol information of ATQB =  $33\ 81\ 81$ . It is an ISO14443-4 Type B tag.

Step 2: Send an APDU, Get Challenge.

<< 00 84 00 00 08

>> 1A F7 F3 1B CD 2B A9 58 [90 00]

Hint: For ISO 14443-4 Type A tags, the ATS can be obtained by using the APDU "FF CA 01 00 00h."

Example: ISO 7816-4 APDU

To read 8 bytes from an ISO 14443-4 Type B PICC (ST19XR08E)

APDU = { 80 B2 80 00 08h }

Class = 80h; INS = B2h; P1 = 80h; P2 = 00h;

Lc = None; Data In = None; Le = 08h

**Answer:** 00 01 02 03 04 05 06 07h [\$90 00]



# 6.0. Peripherals Control

The reader's peripherals control commands are implemented by using *PC\_to\_RDR\_Escape*. The vendor IOCTL for the escape commands is 3500.

# 6.1. Get Firmware Version

This command is used to get the reader's firmware version.

#### Command

Command	Class	INS	P1	P2	Lc
Get Firmware Version	E0h	00h	00h	18h	00h

### Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	Number of Bytes to be Received	Firmware Version

#### **Example:**

Response = E1 00 00 00 11 41 43 52 31 32 32 32 4C 2D 55 20 56 33 30 37 2E 31h

Firmware Version (HEX) = 41 43 52 31 32 32 32 4C 2D 55 20 56 33 30 37 2E 31h

Firmware Version (ASCII) = "ACR1222L-U V307.1"



# 6.2. Buzzer Control

This command is used to control the buzzer output.

#### Command

Command	Class	INS	P1	P2	Lc	Data In
Buzzer Control	E0h	00h	00h	28h	01h	Buzzer On Duration

Where:

**Buzzer On Duration** 1 Byte

01 – FFh = Duration (unit: 100 ms)

# Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	01h	Timer

Where:

Timer 1 Byte

The value is the MCU's timer and is not to be used in the application.



# 6.3. Get Serial Number of the reader

This command is used to retrieve the serial number of the reader.

### Command

Command	Class	INS	P1	P2	Lc
Get Serial Number	E0h	00h	00h	33h	00h

# Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	10h	Serial Number (16 bytes)

Where:

Serial Number: 16 Bytes

The value is the serial number of the reader.



# 6.4. Read the PICC Operating Parameter

This command is used to check current PICC Operating Parameter.

### Command

Command	Class	INS	P1	P2	Lc
Read the PICC Operating Parameter	E0h	00h	00h	20h	00h

# Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	01h	Operating Parameter

# Where:

# **Operating Parameter** 1 Byte

Operating Parameter	Parameter	Description	Option
Bit 0	ISO 14443 Type A	The tag types to be detected during	1 = Detect 0 = Skip
Bit 1	ISO 14443 Type B	PICC Polling	1 = Detect 0 = Skip
Bit 2 – 7	RFU	RFU	RFU



# 6.5. Set PICC Operating Parameter

The command is used to set the PICC Operating Parameter.

### Command

Command	Class	INS	P1	P2	Lc	Data In
Set the PICC Operating Parameter	E0h	00h	00h	20h	01h	Operating Parameter

# Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	01h	Operating Parameter

# Where:

**Operating Parameter** 1 Byte. Default value = 03h

Operating Parameter	Parameter	Description	Option
Bit 0	ISO 14443 Type A	The tag types to be	1 = Detect 0 = Skip
Bit 1	ISO 14443 Type B	detected during PICC Polling	1 = Detect 0 = Skip
Bit 2 – 7	RFU	RFU	RFU



# 6.6. 2 LEDs Control

This command is used to control the first 2 LEDs.

### Command

Command	Class	INS	P1	P2	Lc	Data In
LED Control	E0h	00h	00h	29h	01h	LED Status

# Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	01h	LED Status

# Where:

# **LED Status** 1 Byte

LED Status	Description	Description
Bit 0	Green LED	1 = ON
DIL U	Green LED	0 = OFF
Bit 1	Plus I ED	1 = ON
BILL	Blue LED	0 = OFF
Bit 2 – 7	RFU	RFU



# 6.7. 4 LEDs Control

This command is used to control the 4 LEDs.

### Command

Command	Class	INS	P1	P2	Lc
4 LEDs Control	FFh	00h	44h	bLEDsState	00h

# Where:

# P2 1 Byte. bLEDsState.

CMD	Item	Description
Bit 0	LED_0 State Green LED	1 = On; 0 = Off
Bit 1	LED_1 State Blue LED	1 = On; 0 = Off
Bit 2	LED_2 State Orange LED	1 = On; 0 = Off
Bit 3	LED_3 State Red LED	1 = On; 0 = Off
Bits 4 – 7	RFU	RFU

# Data Out SW1 SW2.

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is completed successfully.
Error	63h	00h	The operation failed.



# 6.8. Set Default LED and Buzzer Behaviors

This command is used to set the default behavior of the LEDs and buzzer.

Note: This command is supported by firmware version 312 and above only.

### Command

Command	Class	INS	P1	P2	Lc	Data In
Set Default LED and Buzzer Behaviors	E0h	00h	00h	21h	01h	Default Behaviors

### Where:

**Default Behaviors** Default value = 8Fh (1 Byte)

LED Status	Description	Description
Bit 0	RFU	RFU
Bit 1	PICC Polling Status LED	To show the PICC polling status.  1 = Enable  0 = Disable
Bit 2	RFU	RFU
Bit 3	RFU	RFU
Bit 4	Card Insertion and Removal Events Buzzer	To make a beep whenever a card insertion or removal event is detected (for PICC).  1 = Enable 0 = Disable
Bit 5	Contactless Chip Reset Indication Buzzer	To make a beep when the contactless chip is reset.  1 = Enable 0 = Disable
Bit 6	RFU	RFU
Bit 7	Card Operation Blinking LED	To blink the LED whenever the card (PICC) is being accessed.

# Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	01h	Default Behaviors



# 6.9. Read Default LED and Buzzer Behaviors

This command is used to set the read the current default behaviors of LEDs and buzzer.

Note: This command is supported by firmware version 312 and above only.

### Command

Command	Class	INS	P1	P2	Lc
Read Default LED and Buzzer Behaviors	E0h	00h	00h	21h	00h

# Response

Response	Class	INS	P1	P2	Le	Data Out
Result	E1h	00h	00h	00h	01h	Default Behaviors

# Where:

**Default Behaviors** Default value = 8Fh (1 Byte)

LED Status	Description	Description
Bit 0	RFU	RFU
Bit 1	PICC Polling Status LED	To show the PICC polling status.  1 = Enable  0 = Disable
Bit 2	RFU	RFU
Bit 3	RFU	RFU
Bit 4	Card Insertion and Removal Events Buzzer	To make a beep whenever a card insertion or removal event is detected (for PICC).  1 = Enable  0 = Disable
Bit 5	Contactless Chip Reset Indication Buzzer	To make a beep when the contactless chip is reset.  1 = Enable 0 = Disable
Bit 6	RFU	RFU
Bit 7	Card Operation Blinking LED	To blink the LED whenever the card (PICC) is being accessed.



# 6.10. Store 1<sup>st</sup> Data Storage Area

This command is used to store a data to 1<sup>st</sup> Data Storage Area (up to 256 Bytes).

#### Command

Command	Class	INS	P1	P2	Lc		Data	
Store 1 <sup>st</sup> Data Storage	FFh	00h	4Ah	00h	00h	Data Len (MSB)	Data Len (LSB)	Data

# Where:

Data Len (MSB) The high byte of the data lengthData Len (LSB) The low byte of the data length

# Response

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is completed successfully.
Error	63h	00h	The operation failed.



# 6.11. Store 2<sup>nd</sup> Data Storage Area

This command is used to store a data to 2<sup>nd</sup> Data Storage Area (up to 256 bytes).

#### Command

Command	Class	INS	P1	P2	Lc		Data	
Store 2nd Data Storage	FFh	00h	4Bh	00h	00h	Data Len (MSB)	Data Len (LSB)	Data

#### Where:

Data Len (MSB) The high byte of the data lengthData Len (LSB) The low byte of the data length

# Store 2<sup>nd</sup> Data Storage Response Format (2 bytes)

Results	SW1	SW2 Meaning			
Success	90h	00h	The operation is completed successfully.		
Error	63h	00h	The operation failed.		



# 6.12. Read 1<sup>st</sup> Data Storage Area

This command is used to read a data from 1<sup>st</sup> Data Storage Area (up to 256 bytes).

#### Command

Command	Class	INS	P1	P2	Lc	Data	
Read 1st Data Storage	FFh	00h	4Ch	00h	00h	Data Len (MSB)	Data Len (LSB)

# Where:

Data Len (MSB) The high byte of the data lengthData Len (LSB) The low byte of the data length

# Response

Results	Data
Result	Data return from the 1 <sup>st</sup> Data Storage Area



# 6.13. Read 2<sup>nd</sup> Data Storage Area

This command is used to read a data from 2<sup>nd</sup> Data Storage Area (up to 256 bytes).

### Command

Command	Class	INS	P1	P2	Lc	Data	
Read 2nd Data Storage	FFh	00h	4Dh	00h	00h	Data Len (MSB)	Data Len (LSB)

# Where:

Data Len (MSB) The high byte of the data lengthData Len (LSB) The low byte of the data length

# Response

Results	Data
Result	Data return from the 2 <sup>nd</sup> Data Storage Area



# 6.14. LCD Control Command

# 6.14.1. Clear LCD

This command is used to clear all contents shown on the LCD.

### Command

Command	Class	INS	P1	P2	Lc
Clear LCD	FFh	00h	60h	00h	00h

### Response

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is completed successfully.
Error	63h	00h	The operation failed.

# 6.14.2. LCD Display (ASCII Mode)

This command is used to display LCD message in ASCII Mode.

#### Command

Command	Class	INS	P1	P2	Lc	Data In (Max. 16Bytes)
LCD Display	FFh	Option Byte	68h	LCD XY Position	LCD Message Length	LCD Message

# Where:

INS 1 Byte. Option Byte

CMD	ltem	Description				
Bit 0	Character Bold Font	1 = Bold; 0 = Normal				
Bit 1 - 3	RFU	RFU				
		00 = Fonts Set A				
Bit 4 - 5	Table Index	01 = Fonts Set B				
		10 = Fonts Set C				
Bits 6 – 7	RFU	RFU				

# Where:

# P2 1 Byte. LCD XY Position

The Character to be displayed on the LCD position specified by DDRAM Address
Please follow the DDRAM table below for the LCD character position's representation:



# For Fonts Set 1 and 2,

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	DISPLAY POSITION
1 <sup>st</sup> LINE	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F	LCD XY
2 <sup>nd</sup> LINE	40	41	42	43	44	45	46	47	48	49	4A	4B	4C	4D	4E	4F	POSITION

### For Fonts Set 3.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	DISPLAY POSITION
1 <sup>st</sup> LINE	00	01	02	03	04	05	06	07	08	09	0A	0B	0C	0D	0E	0F	
2 <sup>nd</sup> LINE	20	21	22	23	24	25	26	27	28	29	2A	2B	2C	2D	2E	2F	LCD XY
3 <sup>rd</sup>	40	41	42	43	44	45	46	47	48	49	4A	4B	4C	4D	4E	4F	POSITION
4 <sup>th</sup> LINE	60	61	62	63	64	65	66	67	68	69	6A	6B	6C	6D	6E	6F	

### Where:

LC LCD Message Length

The length of the LCD message (max. 10h); If the message length is longer than the number of character that the LCD screen's can be shown, then the redundant character will not be shown on the LCD.

Data In LCD Message

The message to be displayed on the LCD, maximum 16 Character for each line.

Please follow the Font tables (selected by INS Bit 4 - 5) below for the LCD Character Index.

**Note:** Size of the Characters in Fonts Set A and Fonts Set B is 8x16, but size of the Characters in Fonts Set C is 8x8.



Character Set A

_	0123456789ABCDEF	0123456789ABCDEF
0		0
1		1 ▶ ◀ Ⅱ ╚╩╝ └┴┘ Ⅱ ┃ ║ │ │ ♦ ▲▼
2	! "#\$%& '() *+,/	2     '   #   \$   %   &     (   )   *   +   ,   -   .   /
3	0123456789:;<=>?	3 0123456789:;<=>?
4	@ABCDEFGHIJKLMNO	4 @ABCDEFGHIJKLMNO 0123456789ABCDEF
5	PQRSTUVWXYZ[\]^_	5 PQRSTUVWXYZ[\]^_ 1 DQRSTUVWXYZ[\]
6	`abcdefghijklmno	6
7	parstuvwxyz{  }~	7 pqrstuvwxyz{  3 ~  3 0 123456789;;   >   >
8	𥹣Ğ"ĆŚŰ ŞIŹĘŹŻ	8 \(\bar{\pi} \) \(\b
9	ŃńČłğ¨ćśűčşıŢęţż	9 4 6 8 9 2 2 2 2 4 4 $\times$
A	á • ¢ £ € ¥ Ч Š@ ª ≪ ¬ - ® -	
В	° ± 2 ° Ž µ¶· Ž 1 ° »ŒœŸ¿	B ABBLTEM3NNKUMHOU 6 FFE B B B B B B B B B B B B B B B B B B
C	ÀÁÂÃÄÄÆÇÈÉÊËÌÍÎÏ	С РСТУФХЦЧШШЪЫЬЭЮЯ A 4 1 6 6 6 7 8 8 8 E E E 1 1 1 1 1 6 8 6 8 6 8 7 9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
D	[8]∉ Y U U U U Ø × 0 0 0 0 0 M Œ	D абвгдежзийклмноп с <u>эггл элиртина</u>
E	à á â ã ä å æ ç è é ê ë ì í î ï	E PCTV Ф X Ц Ч Ш Щ Ъ Ы Б Э Ю Я В
F	ŧñòlóôőö÷øùlúûüý∍ÿ	F MEHTESITIJAHAKSYU FEAZEPIBAUDODO

Character Set B

Character Set C

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is completed successfully.
Error	63h	00h	The operation failed.



# 6.14.3. LCD Display (GB Mode)

This command is used to display LCD message in GB Mode.

#### Command

Command	Class	INS	P1	P2	Lc	Data In (Max. 16 Bytes)
LCD Display	FFh	Option Byte	69h	LCD XY Position	LCD Message Length	LCD Message

#### Where:

# INS 1 Byte. Option Byte

CMD	ltem	Description
Bit 0	Character Bold Font	1 = Bold; 0 = Normal
Bit 1 - 7	RFU	RFU

### P2 LCD XY Position

The Character to be displayed on the LCD position specified by DDRAM Address
Please follow the DDRAM table below for the LCD character position's representation:

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	DISPLAY POSITION
1 <sup>st</sup> LINE	0	0	0	1	0	2	0	3	(	04	0	5	0	6	0	7	LCD XY
2 <sup>nd</sup> LINE	4	0	4	1	4	2	4	3	2	14	4	.5	4	6	4	7	POSITION

# LC LCD Message Length

The length of the LCD message (max. 10h); If the message length is longer than the number of characters that the LCD screen can show, then the redundant character will not be shown on the LCD.

The length of the LCD message should multiple of 2 because each Chinese Character (GB code) should contain two bytes.

# Data In LCD Message

The data to be sent to LCD, maximum of 8 (2 x 8 bit each character) characters for each line.

Please follow the Fonts table of GB Coding.

Results	SW1	SW2	Meaning					
Success	90h	00h	The operation is completed successfully.					
Error	63h	00h	The operation failed.					



# 6.14.4. LCD Display (Graphic Mode)

This command is used to display LCD message in Graphic Mode.

### Command

Command	Class	INS	P1	P2	Lc	Data In (max. 128 Bytes)
LCD Display	FFh	00h	6Ah	Line Index	Pixel Data Length	Pixel Data

Where:

P2 Line Index

To set which line to start to update the LCD Display

Refer to Below LCD Display Position.

Lc Pixel Data Length

The length of the pixel data (max. 80h).

Data In Pixel Data

The pixel data to be sent to LCD for display.

LCD Display Position (Total LCD Size: 128x32):

		Ву	te (	)0h	(X :	= 00	Oh)			Ву	te C	)1h	(X :	= 0′	1h)			Ву	Byte 0Fh (X = 0Fh) 6 5 4 3 2 1					
	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
00h																								
01h																								
02h																								
03h																								
04h																								
05h																								
06h																								
07h																								
08h																								
09h																								
1Fh																								

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is completed successfully.
Error	63h	00h	The operation failed.



# 6.14.5. Scroll Current LCD Display

This command is used to set the scrolling feature of the present LCD display.

### Command

Command	Class	INS	P1	P2	Lc	Data In (6 Bytes)
Scrolling LCD	FFh	00h	6Dh	00h	06h	Scroll Ctrl

#### Where:

Scroll Ctrl 6 Bytes. Scrolling Control Format.

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
X	Y	Scrolling Range	Scrolling Range	Refresh	Scrolling
Position	Position	(Horizontal)	(Vertical)	Speed Ctrl	Direction

### Where:

**X Position** Horizontal Start Up Position. Refer to LCD Display Position below.

Y Position Vertical Start Up Position. Refer to LCD Display Position below.

LCD Display Position (Total LCD Size: 128x32):

		Ву	te (	)0h	(X	= 00	0h)			Ву	te C	)1h	(X :	= 0′	1h)			Ву	te 0	Fh	(X :	= 01	Fh)	
	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
00h																								
01h																								
02h																								
03h																								
04h																								
05h																								
06h																								
07h																								
08h																								
09h																								
			•	•	•	•	•		•	•	•			•	•	•								
1Fh																								

**Scrolling Range (Horizontal)** How many 8 pixels in Horizontal after X position will be scrolled.

**Scrolling Range (Vertical)** How many pixels in Vertical after Y position will be scrolled.

**Refresh Speed Ctrl** Bit0~Bit3 – How many pixel move pre scrolling.



Bit4~Bit7 - Scrolling period

Bit7	Bit6	Bit5	Bit4	Scrolling Period
0	0	0	0	1 Unit
0	0	0	1	3 Units
0	0	1	0	5 Units
0	0	1	1	7 Units
0	1	0	0	17 Units
0	1	0	1	19 Units
0	1	1	0	21 Units
0	1	1	1	23 Units
1	0	0	0	129 Units
1	0	0	1	131 Units
1	0	1	0	133 Units
1	0	1	1	135 Units
1	1	0	0	145 Units
1	1	0	1	147 Units
1	1	1	0	149 Units
1	1	1	1	151 Units

Bit1	Bit0	Scrolling Direction
0	0	From Left to Right
0	1	From Right to Left
1	0	From Top to Bottom
1	1	From Bottom to Top

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is completed successfully.
Error	63h	00h	The operation failed.



# 6.14.6. Pause LCD Scrolling

This command is used to pause the LCD scrolling. To resume the scrolling, send the Scroll LCD command again.

# Command

Command	Class	INS	P1	P2	Lc
Pause LCD Scrolling	FFh	00h	6Eh	00h	00h

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is successfully completed.
Error	63h	00h	The operation failed.



# 6.14.7. Stop LCD Scrolling

This command is used to stop the LCD Scrolling set. The LCD display comes back to normal display position.

# Command

Command	Class	INS	P1	P2	Lc
Stop Scrolling LCD	FFh	00h	6Fh	00h	00h

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is successfully completed.
Error	63h	00h	The operation failed.



# 6.14.8. LCD Contrast Control

This command is used to control the LCD contrast.

### Command

Command	Class	INS	P1	P2	Lc
LCD Contrast Control	FFh	00h	6Ch	Contrast Control	00h

### Where:

# Contrast Control 1 Byte

The value range is between 00h to 0Fh. Larger value brightens the contrast. Lower range, on the other hand, darkens the contrast.

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is successfully completed.
Error	63h	00h	The operation failed.



# 6.14.9. LCD Backlight Control

This command controls the LCD Backlight.

# Command

Command	Class	INS	P1	P2	Lc
LCD Backlight Control	FFh	00h	64h	Backlight Control	00h

# Where:

# Backlight Control 1 Byte

CMD	Description		
00h	LCD Backlight Off		
FFh	LCD Backlight On		

Results	SW1	SW2	Meaning
Success	90h	00h	The operation is successfully completed.
Error	63h	00h	The operation failed.



# Appendix A. Basic Program Flow for Contactless Applications

Step 0. Start the application. The reader will do the PICC Polling and scan for tags continuously. Once the tag is found and detected, the corresponding ATR will be sent to the PC.

Step 1. Connect the ACR1222L PICC Interface with T=1 protocol.

Step 2. Access the PICC by exchanging APDUs.

..

Step N. Disconnect the ACR122L PICC Interface and close the application.



# Appendix B. Access PCSC Compliant Tags (ISO 14443-4)

All ISO 14443-4 compliant cards (PICCs) would understand the ISO 7816-4 APDUs. The ACR1222L needs to communicate with the ISO 14443-4 compliant cards through exchanging ISO 7816-4 APDUs and Responses. ACR1222L will handle the ISO 14443 Parts 1-4 Protocols internally.

MIFARE 1K, 4K, MINI and Ultralight tags are supported through the T=CL emulation. Just simply treat the MIFARE tags as standard ISO 14443-4 tags. For more information, please refer to **Section 5.2.3**.

### ISO 7816-4 APDU Command

Command	Class	INS	P1	P2	Lc	Data In	Le
ISO 7816 Part 4 Command					Length of the Data In		Expected length of the Response Data

### ISO 7816-4 Response

Response	Data Out						
Result	Response Data	SW1	SW2				

Where:

**SW1, SW2** = 90 00h means the operation is completed successfully = 63 00h means the operation failed

### Typical sequence may be:

- Present the Tag and Connect the PICC Interface.
- Read/Update the memory of the tag.

### Step 1: Connect the Tag.

The ATR of the tag is 3B 8C 80 01 50 57 26 34 D9 1C 2D 94 11 F7 71 85 76

In which,

The ATQB =  $50\ 57\ 26\ 34\ D9\ 1C\ 2D\ 94\ 11\ F7\ 71\ 85$ . It is an ISO14443-4 Type B tag.

### Step 2: Send an APDU, Get Challenge.

<< 00 84 00 00 08 >> 44 70 3D A2 6C DA 43 D5 [90 00]

Note: For ISO 14443-4 Type A tags, the ATS can be obtained by using the APDU "FF CA 01 00 00h"



Example: ISO 7816-4 APDU

To read 8 bytes from an ISO 14443-4 TypeA PICC.

APDU ={80 B2 80 00 08h}

 $\begin{array}{ll} \text{Class} &= 80\text{h} \\ \text{INS} &= B2\text{h} \\ \text{P1} &= 80\text{h} \\ \text{P2} &= 00\text{h} \\ \text{Lc} &= \text{None} \\ \text{Data In} &= \text{None} \\ \text{Le} &= 08\text{h} \\ \end{array}$ 

**Answer:** 01 02 03 04 05 06 07 08h [90 00h]



# Appendix C. Access MIFARE DESFire Tags (ISO 14443-4)

The MIFARE DESFire supports ISO 7816-4 APDU Wrapping and Native modes. Once the DESFire Tag is activated, the first APDU sent to the DESFire Tag will determine the "Command Mode". If the first APDU is "Native Mode", the rest of the APDUs must be in "Native Mode" format. Similarly, if the first APDU is "ISO 7816-4 APDU Wrapping Mode", the rest of the APDUs must be in "ISO 7816-4 APDU Wrapping Mode" format.

Example 1: MIFARE DESFire ISO 7816-4 APDU Wrapping.

To read 8 bytes random number from an ISO 14443-4 Type A PICC (DESFire)

APDU = {90 0A 00 00 01 00 00h}

Class = 90h; INS = 0Ah (DESFire Instruction); P1 = 00h; P2 = 00h

Lc = 01h; Data In = 00h; Le = 00h (Le = 00h for maximum length)

**Answer:** 7B 18 92 9D 9A 25 05 21h [\$91 AFh]

**Note:** Status Code {91 AFh} is defined in DESFire specification. Please refer to the DESFire specification for more details.

Example 2: MIFARE DESFire Frame Level Chaining (ISO 7816 wrapping mode)

In this example, the application has to do the "Frame Level Chaining".

To get the version of the DESFire card:

Step 1: Send an APDU {90 60 00 00 00h} to get the first frame. INS=60h

**Answer:** 04 01 01 00 02 18 05 91 AFh [\$91 AFh]

Step 2: Send an APDU {90 AF 00 00 00h} to get the second frame. INS=AFh

**Answer:** 04 01 01 00 06 18 05 91 AFh [\$91 AFh]

Step 3: Send an APDU {90 AF 00 00 00h} to get the last frame. INS=AFh

**Answer:** 04 52 5A 19 B2 1B 80 8E 36 54 4D 40 26 04 91 00h [\$91 00h]

**Example 3**: MIFARE DESFire Native Command.

We can send Native DESFire Commands to the reader without ISO 7816 wrapping if we find that the Native DESFire Commands are easier to handle.

To read 8 bytes random number from an ISO 14443-4 Type A PICC (DESFire)

 $APDU = \{0A 00h\}$ 

Answer: AF 25 9C 65 0C 87 65 1D D7h [\$1D D7h]

In which, the first byte "AFh" is the status code returned by the DESFire Card.

Page 51 of 60



The Data inside the blanket [\$1D D7h] can simply be ignored by the application.

**Example 4:** MIFARE DESFire Frame Level Chaining (Native Mode)

In this example, the application has to do the "Frame Level Chaining".

To get the version of the DESFire card:

Step 1: Send an APDU {60h} to get the first frame. INS=60h

**Answer:** AF 04 01 01 00 02 18 05h [\$18 05h]

Step 2: Send an APDU {AFh} to get the second frame. INS=AFh

**Answer:** AF 04 01 01 00 06 18 05h [\$18 05h]

Step 3: Send an APDU {AFh} to get the last frame. INS=AFh

**Answer:** 00 04 52 5A 19 B2 1B 80 8E 36 54 4D 40 26 04h [\$26 04h]

**Note:** In MIFARE DESFire Native Mode, the status code [90 00h] will not be added to the response if the response length is greater than 1. If the response length is less than 2, the status code [90 00h] will be added in order to meet the requirement of PC/SC. The minimum response length is 2.

# Appendix D. Access FeliCa Tags (ISO 18092)

Typical sequence may be:

- Present the FeliCa Tag and Connect the PICC Interface.
- Read/Update the memory of the tag.

### Step 1: Connect the Tag.

```
The ATR = 3B 8F 80 01 80 4F 0C A0 00 00 03 06 03 F0 11 00 00 00 00 8A

In which,
F0 11 = FeliCa 212K
```

### Step 2: Read the memory block without using Pseudo APDU.

```
<< 10 06 [8-byte NFC ID] 01 09 01 01 80 00

>> 1D 07 [8-byte NFC ID] 00 00 01 00 AA 55 AA
```

or

# Step 2: Read the memory block using Pseudo APDU.

```
<< FF 00 00 00 [13] D4 40 01 10 06 [8-byte NFC ID] 01 09 01 01 80 00
In which,
[13] is the length of the Pseudo Data "D4 40 01.. 80 00"
D4 40 01 is the Data Exchange Command</pre>
```

```
>> D5 41 00 1D 07 [8-byte NFC ID] 00 00 01 00 AA 55 AA
```

In which, D5 41 00 is the Data Exchange Response

**Note:** The NFC ID can be obtained by using the APDU "FF CA 00 00 00h". Please refer to the FeliCa specification for more detailed information.

# Appendix E. NFC Forum Type 1 Tags (ISO 18092)

E.g. Jewel and Topaz Tags

Typical sequence may be:

- Present the Topaz Tag and Connect the PICC Interface.
- Read / Update the memory of the tag.

```
Step 1: Connect the Tag
The ATR = 3B 8F 80 01 80 4F 0C A0 00 00 03 06 03 F0 04 00 00 00 09 F
In which,
F0 04 = Topaz
Step 2: Read the memory address 08 (Block 1: Byte-0) without using Pseudo APDU
<< 01 08
>> 18 [90 00]
In which, Response Data = 18
or
Step 2: Read the memory address 08 (Block 1: Byte-0) using Pseudo APDU
<< FF 00 00 00 [05] D4 40 01 01 08
In which,
[05] is the length of the Pseudo APDU Data "D4 40 01 01 08"
D4 40 01 is the DataExchange Command.
01 08 is the data to be sent to the tag.
>> D5 41 00 18 [90 00]
In which, Response Data = 18
Tip: To read all the memory content of the tag
<< 00
>> 11 48 18 26 .. 00 [90 00]
Step 3: Update the memory address 08(Block 1: Byte-0) with the data FF
<< 53 08 FF
>> FF [90 00]
In which, Response Data = FF
```



# **Topaz Memory Map.**

Memory Address = Block No \* 8 + Byte No

e.g. Memory Address  $08h = 1 \times 8 + 0 = Block 1$ : Byte-0 = Data0

e.g. Memory Address  $10h = 2 \times 8 + 0 = Block 2$ : Byte-0 = Data8

EEPROM Memory Map										
Туре	Block No.	Byte-0 (LSB)	Byte-1	Byte-2	Byte-3	Byte-4	Byte-5	Byte-6	Byte-7 (MSB)	Lockable
UID	0	UID-0	UID-1	UID-2	UID-3	UID-4	UID-5	UID-6		Locked
Data	1	Data0	Data1	Data2	Data3	Data4	Data5	Data6	Data7	Yes
Data	2	Data8	Data9	Data10	Data11	Data12	Data13	Data14	Data15	Yes
Data	3	Data16	Data17	Data18	Data19	Data20	Data21	Data22	Data23	Yes
Data	4	Data24	Data25	Data26	Data27	Data28	Data29	Data30	Data31	Yes
Data	5	Data32	Data33	Data34	Data35	Data36	Data37	Data38	Data39	Yes
Data	6	Data40	Data41	Data42	Data43	Data44	Data45	Data46	Data47	Yes
Data	7	Data48	Data49	Data50	Data51	Data52	Data53	Data54	Data55	Yes
Data	8	Data56	Data57	Data58	Data59	Data60	Data61	Data62	Data63	Yes
Data	9	Data64	Data65	Data66	Data67	Data68	Data69	Data70	Data71	Yes
Data	А	Data72	Data73	Data74	Data75	Data76	Data77	Data78	Data79	Yes
Data	В	Data80	Data81	Data82	Data83	Data84	Data85	Data86	Data87	Yes
Data	С	Data88	Data89	Data90	Data91	Data92	Data93	Data94	Data95	Yes
Reserved	D									
Lock/Reserved	Е	LOCK-0	LOCK-1	OTP-0	OTP-1	OTP-2	OTP-3	OTP-4	OTP-5	

Reserved for internal use	
User Block Lock & Status	
OTP bits	

**Note:** Please refer to the Jewel and Topaz specification for more detailed information.



# Appendix F. Basic Program Flow for SAM Applications

**Step 0:** Start the application. The reader will do the PICC Polling and scan for tags continuously. Once the tag is found and detected, the corresponding ATR will be sent to the PC.

Step 1: Connect the ACR1222L SAM Interface N( N = 0, 1, 2 ) with T=0 or T=1protocol.

Step 2: Access the PICC by exchanging APDUs.

..

**Step N:** Disconnect the ACR1222L SAM Interface N(N = 0, 1, 2). Close the application.

# Appendix G. Access ACOS3 SAM Cards (ISO 7816)

### Step 1: Connect the Tag.

The ATR of the tag is 3B BE 18 00  $\overset{00}{00}$  41 01 38 00 00 01 00 12 34 56 78 01 90 00

In which,

TD1 = 00 and TD2 is absent ,So the SAM Card is a T=0 SAM Card

### Step 2: Get a 'random' for the SAM Card.

<< 80 84 00 00 08

>> 5F 9F 97 C6 93 61 B5 AD 90 00[\$9000]

### Step 3: Create a file on SAM Card and open it.

<<80 20 07 00 08 41 43 4F 53 54 45 53 54

>>90 00[\$9000]

<<80 A4 00 00 02 FF 02

>>90 00[\$9000]

<<80 D2 00 00 04 00 00 01 00

>>90 00[\$9000]

<<80 A4 00 00 02 FF 04

>>90 00[\$9000]

<<80 D2 00 00 06 ff 01 00 00 55 55

>>90 00[\$9000]

<<80 A4 00 00 02 55 55

>>91 00[\$9000]

File name is 55 55

### Step 4: Write a date to the file in Step 3.

<<80 d2 00 00 08 01 02 03 04 05 06 07 08 >>90 00[\$9000]

### Step 5: Read a date from a file.

<<80 b2 00 00 08

>>01 02 03 04 05 06 07 08 90 00[\$9000]



# Appendix H. ACR122U Compatible Commands

# Appendix H.1. Direct Transmit via PC\_to\_RDR\_XfrBlock/PC\_to\_RDR\_Escape

This command is used to send Pseudo APDU (Contactless Chip and Tag commands), and the Response Data will be returned.

#### Command

Command	Class	INS	P1	P2	Lc	Data In
Direct Transmit	FFh	00h	00h	00h	Number of Bytes to send	Contactless Chip and Tag Command

### Where:

Lc 1 Byte. Number of Bytes to Send

Maximum 255 bytes

Data In Contactless Chip or Tag Command

The data to be sent to the Contactless Chip and Tag

### Response

Response	Data Out			
Result	Contactless Chip and Tag Response	SW1 SW2		

### Where:

**Contactless Chip and Tag Response** Contactless Chip and Tag Response returned by the reader.

SW1, SW2 = 90 00h means the operation is completed successfully

= 63 00h means the operation failed

= 63 27h means the checksum of the Response is wrong

# **Appendix H.2. Get Firmware Version**

This command is used to get the reader's firmware version.

### Command

Command	Class	INS	P1	P2	Le
Get Response	FFh	00h	48h	00h	00h

Response	Data Out
Result	Firmware Version

Example Response = 41 43 52 31 32 32 32 4C 2D 55 20 56 33 30 37 2E 31h = ACR1222L-U V307.1 (ASCII)

# Appendix H.3. Get PICC Operating Parameter

This command is used to retrieve the PICC Operating Parameter of the reader.

### Command

Command	Class	INS	P1	P2	Le
Get the PICC Operating Parameter	FFh	00h	50h	00h	00h

# Response

Response	Data Out
Result	PICC Operating Parameter

### Where:

# **PICC Operating Parameter** Default Value = FFh.

Bit	Parameter	Description	Option
7	Auto PICC Polling	To enable the PICC Polling	1 = Enable 0 = Disable
6	Auto ATS Generation	To issue ATS Request whenever an ISO 14443-4 Type A tag is activated	1 = Enable 0 = Disable
5	Polling Interval	To set the time interval between successive PICC Polling.	1 = 250 ms 0 = 500 ms
4	FeliCa 424K		1 = Detect 0 = Skip
3	FeliCa 212K		1 = Detect 0 = Skip
2	Topaz	The Tag Types to be detected during	1 = Detect 0 = Skip
1	ISO 14443 Type B	PICC Polling.	1 = Detect 0 = Skip
	ISO 14443 Type A		
0	Note: To detect the MIFARE Tags, the Auto ATS Generation must be disabled first.		1 = Detect 0 = Skip



# Appendix H.4. Set the PICC Operating Parameter

This command is used to set the PICC Operating Parameter of the reader.

### Command

Command	Class	INS	P1	P2	Le
Set the PICC Operating Parameter	FFh	00h	51h	New PICC Operating Parameter	00h

### Response

Response	Data Out
Result	PICC Operating Parameter

### Where:

PICC Operating Parameter Default Value = FFh

Bit	Parameter	Description	Option
7	Auto PICC Polling	To enable the PICC Polling	1 = Enable 0 = Disable
6	Auto ATS Generation	To issue ATS Request whenever an ISO14443-4 Type A tag is activated	1 = Enable 0 = Disable
5	Polling Interval	To set the time interval between successive PICC Polling	1 = 250 ms 0 = 500 ms
4	FeliCa 424K		1 = Detect 0 = Skip
3	FeliCa 212K		1 = Detect 0 = Skip
2	Topaz	The Tag Types to be detected during	1 = Detect 0 = Skip
1	ISO 14443 Type B	PICC Polling.	1 = Detect 0 = Skip
	ISO 14443 Type A		
0	Note: To detect the MIFARE Tags, the Auto ATS Generation must be disabled first.		1 = Detect 0 = Skip

Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of the Microsoft group of companies.

MIFARE, MIFARE Classic, MIFARE DESFire, MIFARE Ultralight, MIFARE Mini are registered trademarks of NXP B.V. and is used under license.